


PRS RF Student Clicker/Remote

Two line display for indicating response and status of received

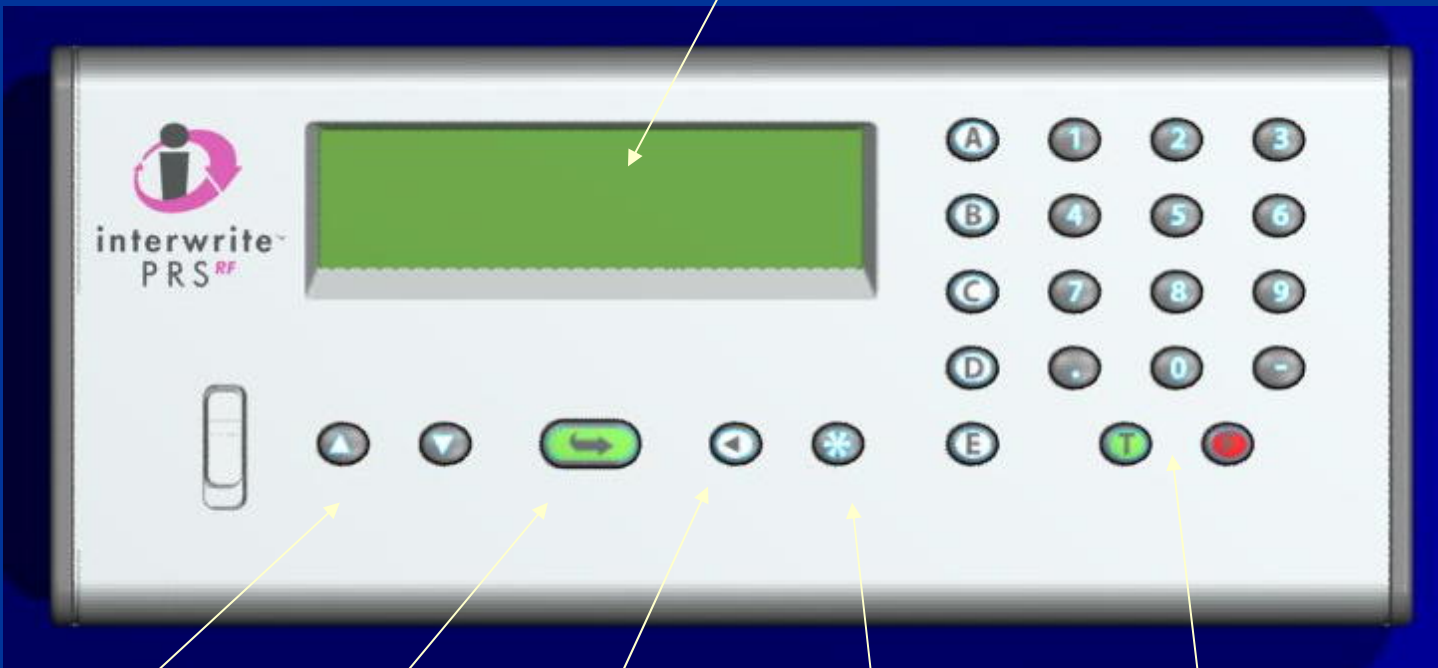

PRS rf

Scroll Keys

Send/Enter

Backspace

Alpha, Numeric and T/F Keys

Setup Key

Diagnostics include Battery level %

AAA batteries used to keep future costs down.

Sign on Process (First Time)

- Turn on Clicker
 - Battery symbol displayed
- Stop scan by hitting “*” on the keypad
- Hit “*” again which takes you to the Setup Menu
- Scroll Up to ID:
- Hit “Send/Enter” key (→)
- Type ID number; **your 8 digit SPIRE ID number**
- Hit “Send/Enter” (→)
- Hit “*” to exit Setup Menu
- Your ID is now stored in the unit

Joining a class once ID is entered

Students simply turn on units and either

- Wait for a class to appear and select it (this may take awhile)
- Or Jump to the channel that the unit is on by looking at the screen and seeing the letter or number < ? > associated with this class
- You can join the class at any point after the class is started.